

# Engine Oil & Filter


- Pour the drained oil into a suitable container and dispose of it in an approved manner (page 210).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

### *Add Engine Oil:*

- Check that the drain plug sealing washer (6) and O-ring (7) are in good condition. If necessary, replace them.

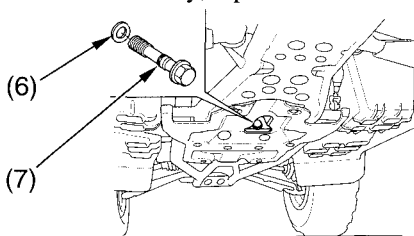

(6) drain plug sealing washer

(7) O-ring

- Apply a thin coat of engine oil to the O-ring.
- Reinstall the engine oil drain plug and tighten it to the specified torque:  
18 lbf-ft (25 N·m , 2.5 kgf·m)
- Fill the crankcase with the recommended grade oil approximately:  
4.3 US qt (4.1 ℓ)
- Reinstall the oil filler cap.
- Start the engine and let it idle for 5 minutes.
- Stop the engine and after 2 – 3 minutes, check the oil level. Make sure the oil is between the upper and lower level marks on the dipstick.  
If necessary, add more oil but do not overfill.
- Reinstall the oil filler cap and dipstick.
- Check that there are no oil leaks.  
If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.