



Is Your ATV Ready to Ride?

<i>Fuel</i>	Check the level and add fuel (page 90) if needed. Also make sure the fuel fill cap is securely fastened. Check for leaks.
<i>Tyres</i>	Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 134).
<i>Drive Chain</i>	Check the condition and slack. Adjust and lubricate if needed. Also check the chain slider for wear and replace if needed (page 143).
<i>Drivetrain Boots</i>	Check for damage (page 142).
<i>Guards</i>	Check for damage or looseness (page 140).
<i>Nuts & Bolts</i>	Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight.
<i>Underbody & Exhaust System</i>	Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle.
<i>Air Cleaner Housing Drain Tube</i>	Check for deposits in the drain tube. If necessary, clean the tube (page 112) and check the air cleaner housing.

