



## Riding in Reverse

11. To shift out of reverse into 1st gear, pull in the clutch lever/parking brake lever and raise the shift lever one click to 1st gear. Make sure that the reverse indicator goes off.

### **WARNING**

Applying only the rear brake abruptly when operating in reverse gear could cause the front wheels to lift off the ground and the ATV could overturn backwards.

Carefully apply both the front and rear brakes when stopping in reverse gear.

