



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			km	150	1000	2000	
			mi	100	600	1200	
			HOURS	20	100	200	
DRIVETRAIN BOOTS				I	I	142	
DRIVE CHAIN	NOTE 1,2		I, L	(I, LEVERY 500 km (300 mi) or 50 operating hours)		143	
DRIVE CHAIN SLIDER				I	I	145	
* BRAKE FLUID	NOTE 3			I	I	125	
* BRAKE PADS WEAR	NOTE 1,2				I	129	
* BRAKELIGHT SWITCH			I	I	I	131	
BRAKE SYSTEM			I	I	I	125	
GUARDS				I	I	140	
SCRAPER	NOTE 2			I	I	141	
* CLUTCH SYSTEM			I	I	I	115	
* SUSPENSION				I	I	—	
* SPARK ARRESTER				C	C	123	
* NUTS, BOLTS, FASTENERS			I		I	—	
** WHEELS/TYRES			I	I	I	—	
** TIE-ROD AND JOINT BOOTS			I	I	I	—	
** STEERING SHAFT HOLDER BEARINGS					I	—	
** STEERING SYSTEM					I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

