



Engine Oil & Filter

Checking & Adding Engine Oil


Refer to *Safety Precautions* on page 77 .

Check the engine oil level each day before operating your ATV and add if needed.

Before riding your ATV, check the engine oil level.

1. Park your ATV on a firm, level surface.
2. Remove the oil filler cap/dipstick (1) from the oil tank (2) and wipe it clean.
3. Insert the oil filler cap/dipstick without screwing it in, then remove the oil filler cap/dipstick and check the oil level.
 - If the oil level is above the lower level mark (3) on the oil filler cap/dipstick, install the oil filler cap/dipstick, and proceed to the *Oil Tank Level Check* (page 97).
 - If the oil level is below the lower level mark on the oil filler cap/dipstick, install the oil filler cap/dipstick, and proceed to the *Crankcase Oil Level Check* (page 96).

RIGHT SIDE

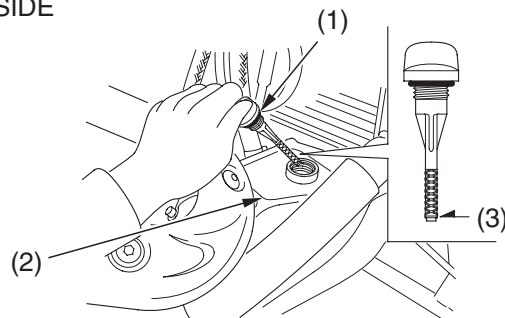

(1) oil filler cap/dipstick
(2) oil tank

(3) lower level mark

(cont'd)