



# Valves

---

## Valve Inspection

Refer to *Safety Precautions* on page 77.

Valve clearance should be:

Intake: 0.15 mm (0.006 in)

Exhaust: 0.20 mm (0.008 in)

Excessive clearance will cause noise. Insufficient clearance will cause loss of power and possibly damage the valves.

For those who are mechanically proficient and have the proper tools, instructions on adjusting valve clearances are given in the official Honda Shop Manual. Otherwise, the valves should be adjusted by your Honda dealer.

