

# Engine Oil

## Changing Engine Oil


Refer to *Safety Precautions* on page 84 .

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid (page 156). If you do not have the skills or the tools, see your Honda dealer.

### *Drain the Engine Oil:*

1. With the ATV on the level ground, remove the oil filler cap/dipstick from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

### UNDER ENGINE

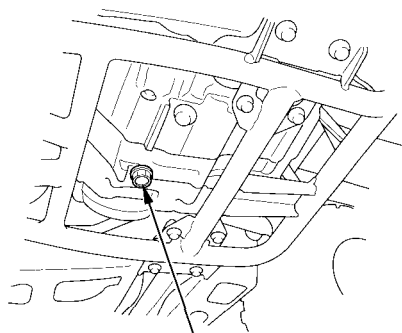

(1)

(1) oil drain plug

(cont'd)