
## **Battery**

The battery is located in a compartment under the seat.

## UNDER SEAT

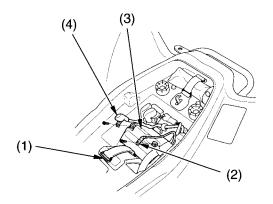

- (1) rubber band
- (2) negative (-) terminal lead
- (3) battery
- (4) positive (+) terminal lead

## Removal

- 1. Make sure the ignition switch is OFF ( O ).
- 2. Remove the seat (page 95).
- 3. Release the rings and remove the rubber band (1).
- 4. Disconnect the negative (-) terminal lead (2) from the battery (3) first, then disconnect the positive (+) terminal lead (4).
- 5. Remove the battery.
- 6. Charge the battery (see following section), unless you have been riding regularly.
- 7. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperature and direct sunlight.
- 8. Clean the battery box after removing the battery for storage. Dry the battery box and, if paint is missing, re-paint the area.
- 9. Slow charge the battery (see following section) once every 30 days.

## 144 Servicing Your Honda