Is Your ATV Ready to Ride?

Leaks, Loose Parts Walk around your ATV and look for anything

that appears unusual, such as a leak or loose

cable.

Cable Check the cable housings for wear. Check the

fittings for looseness. Replace or tighten as

needed.

Check these items after you get on the ATV:

Throttle Check the freeplay and adjust if needed. Press

the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions

(page 109).

Brakes Squeeze the front and rear brake levers and

step on the rear brake pedal to check that the controls operate normally. Check for proper

freeplay (pages 118, 120, 121).

Engine Stop

Switch

Check for proper function (page 21).

Steering Check that the wheels turn properly as you

steer the handlebar. Move the handlebar right and left and check that there is no excessive

backlash.

Remember, be sure to take care of any problem you find, or have your

Honda dealer correct it before you ride.