


Refuelling

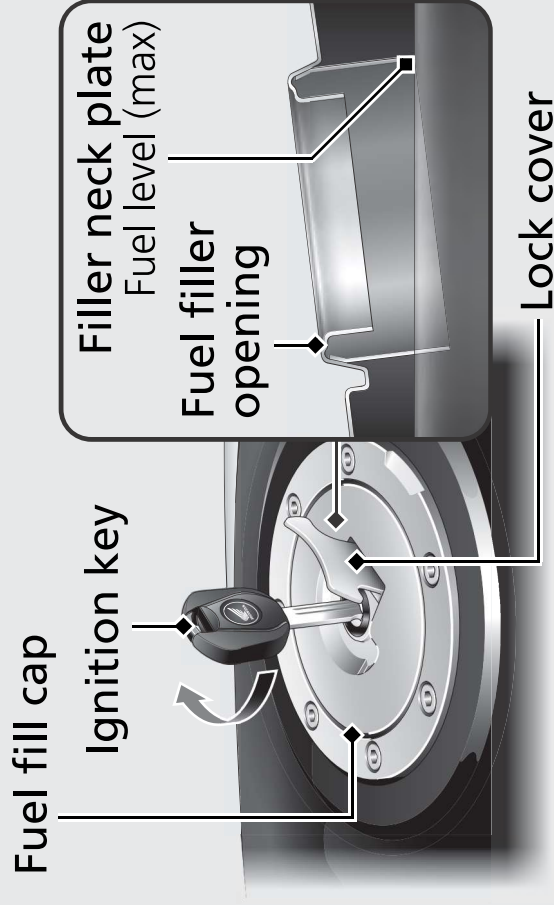

Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to open the cap.

Closing the Fuel Fill Cap

- 1 After refuelling, push the fuel fill cap closed until it locks.
- 2 Remove the key and close the cover.
 - ▶ The key cannot be removed if the cap is not locked.

Do not fill with fuel above the plate.

Fuel type: Unleaded petrol only

Fuel octane number: Your motorcycle is designed to use Research Octane Number (RON) 95 or higher.

Tank capacity: 21.5 litres (5.68 US gal, 4.73 Imp gal)

Refuelling and Fuel Guideline P.15

! WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.