


Changing Final Drive Oil

1. Place your motorcycle on the side stand on a level surface.
2. Open the final gear cover. **➤**P. 64
3. Place a drain pan under the drain bolt.
4. Remove the oil fill hole cap, drain bolt, and sealing washer to drain the oil.

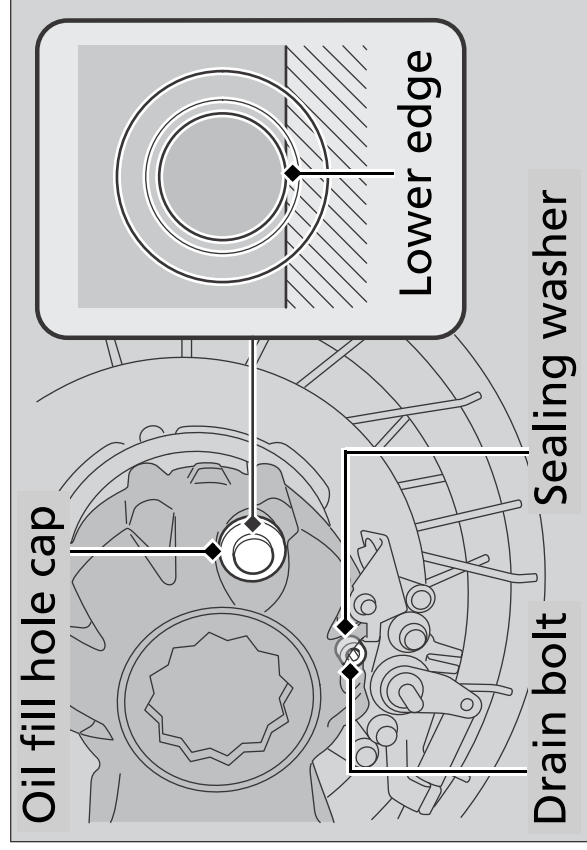

5. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 12 N·m (1.2 kgf·m, 9 lbf·ft).

6. Fill the final gear with the recommended oil. **➤**P. 58

Required oil:

200 cm³ (6.8 US oz, 7.0 Imp oz)

7. Check the oil level. It should be flush with the lower edge of the oil fill hole.
8. Reinstall the oil fill hole cap and tighten.

Torque: 8 N·m (0.8 kgf·m, 5.9 lbf·ft).

9. Check that there are no oil leaks.
10. Close the final gear cover.