


Throttle ► Adjusting the Throttle Freeplay

Adjusting the Throttle Freeplay

1. Slide the cable boot.
2. Loosen the lock nut.
3. Turn the adjuster until the freeplay is 2 to 4 mm (0.08 to 0.16 in).
4. Tighten the lock nut, return the cable boot, and inspect the throttle action again.

(VFR1200X)

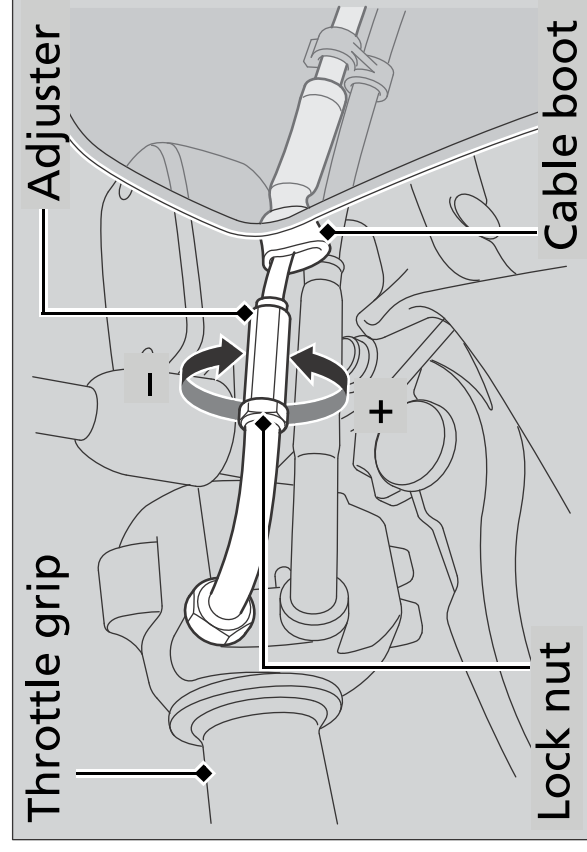

(VFR1200XD)

