


## HEADLIGHT BEAM ADJUSTMENT

To adjust the headlight beam vertically, remove the left inner pannel (see page 25) and turn the knob (1) (2) in either direction.

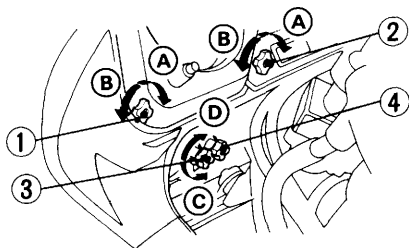

- (1) Adjusting knob (Right side) (vertical)
- (2) Adjusting knob (Left side) (vertical)  
<Except IT>
- (3) Adjusting knob for right headlight  
(horizontal) <Except IT>
- (4) Adjusting knob for left headlight  
(horizontal)
- (A) Up
- (B) Down
- (C) Left
- (D) Right

Turn the knob (3) (4) to adjust the headlight beam horizontally.

Obey local laws and regulations.

### **▲ WARNING**

- \* **Do not adjust the headlight beam while riding the motorcycle. Keep both hands on the handlebars while riding.**