

BATTERY

(Refer to the maintenance precautions on page 56).

It is not necessary to check the battery electrolyte level or add distilled water as the battery is a maintenance-free (sealed) type. If the battery loses electrolyte and/or seems weak (causing hard starting or other electrical troubles), contact your authorized Honda dealer.

CAUTION:


- * Do not attempt to remove the sealing caps from the cells—you may damage the battery.
- * When this motorcycle is to be stored for an extended period of time, remove the battery and charge it fully. Then store it in a cool, dry place. If the battery is to be left in the motorcycle, disconnect the negative cable from the battery terminal.

⚠ WARNING

- * Even though the battery is sealed, it still vents explosive gases. Do not allow open flames or sparks near the battery.

Battery Removal

1. Remove the seat (page 39).
2. Remove the band (1).
3. Remove the battery cover (2).

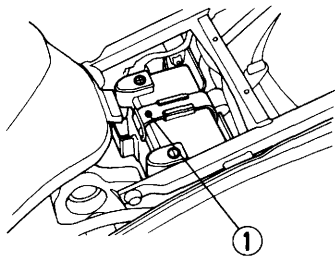

(1) Band