


REAR SEAT COVER

See your Honda dealer for installation/
removal of the rear seat cover.

Installation:

1. Remove the seat (page 58).
2. Remove the caps (1), bolts (2) and washers (3).
3. Remove the rear grab rails (4).
4. Install the grab rail covers (5).

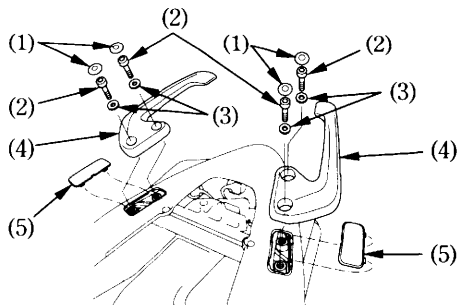

- (1) Caps
(2) Bolts
(3) Washers

- (4) Grab rails
(5) Grab rail covers