
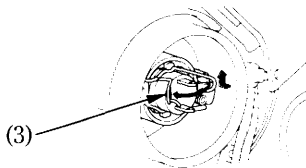


## Headlight Bulb

1. Remove the inner panel (page 67 ).
2. Pull off the socket (1 ) without turning.
3. Remove the dust cover (2).
4. Remove the bulb (4) while pressing down on the pin (3).
5. Pull out the bulb (4) without turning.
6. Install a new bulb in the reverse order of removal.
  - Install the dust cover with its arrow mark (5) facing up.

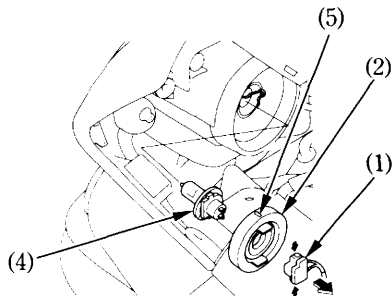

- (1) Socket  
(2) Dust cover  
(3) Pin

- (4) Bulb  
(5) Arrow mark