

(Ref.No.) Description	Function
(11) SELECT button	Except E, III E type: This button is used to select the coolant or air temperature meter or to adjust the time. For E, III E type: This button is used to select the coolant or air temperature meter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter.
(12) Left multi-function display	The display includes the following functions; This display shows the initial display (page 18).
	Speedometer Shows riding speed (page 23).
	Coolant temperature meter Shows coolant temperature (page 21).
	Air temperature meter Shows air temperature (page 22).