

## SEAT

The seat must be removed for battery maintenance.


### Removal:

1. Remove the seat strap (1) by removing the bolts (2) and collars (3).
2. Pull the seat (4) back and up.

### Installation:

1. Position the seat so the hole (5) on the back center is aligned with the hook (6) on the rear fender.
2. Insert the hook in the seat hole and insert the tab (7) into the recess under the frame.
3. Install the seat strap in the reverse order of removal.

Be sure the seat is locked securely in position after installation.

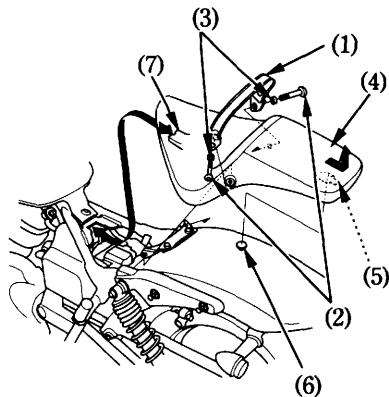

- |                |          |
|----------------|----------|
| (1) Seat strap | (5) Hole |
| (2) Bolts      | (6) Hook |
| (3) Collars    | (7) Tab  |
| (4) Seat       |          |