

Gauges, Indicators & Displays

8	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 169 for instructions and cautions. <i>Lamp Check</i> .
9	neutral indicator (green)	Lights when the transmission is in neutral.
10	high beam indicator (blue)	Lights when the headlight is on high beam.
11	left turn signal indicator (orange)	Flashes when the left turn signal operates.