


## Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Select the digital clock mode (1).
3. Push and hold both the mode switch (2) and reset switch (3) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

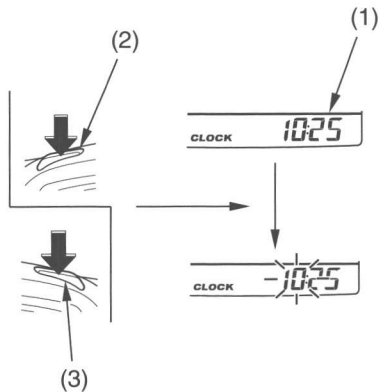

- (1) digital clock mode
- (2) mode switch
- (3) reset switch

(cont'd)