

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 188).

To protect the catalytic converters in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions	44
Starting & Stopping the Engine	45
Preparation.....	45
Starting Procedure	46
Flooded Engine	47
Bank Angle Sensor Ignition Cut-off System	47
How to Stop the Engine	48
Shifting Gears.....	49
Braking	51
Parking.....	53
Theft-Prevention Tips	56
Riding with a Passenger or Cargo.....	57