

# Maintenance Schedule

			FREQUENCY	ODOMETER READING (Note 1)							Refer to page
				× 1,000 mi	4	8	12	16	20	24	
ITEM			NOTE	× 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSION RELATED ITEMS		FINAL DRIVE OIL				I		I		R	103
		BRAKE FLUID	4		I	I	R	I	I	R	118
		BRAKE PAD WEAR			I	I	I	I	I	I	121
		BRAKE SYSTEM						I		I	118
	*	BRAKELIGHT SWITCH					I		I	I	—
	*	HEADLIGHT AIM					I		I	I	—
		CLUTCH SYSTEM					I		I	I	108
		CLUTCH FLUID	4		I	I	R	I	I	R	108
		SIDE STAND					I		I	I	129
	*	SUSPENSION					I		I	I	—
	*	NUTS, BOLTS, FASTENERS					I		I	I	—
	**	WHEELS/TIRES					I		I	I	—
	**	STEERING HEAD BEARINGS					I		I	I	—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202 ).

\*\*In the interest of safety, we recommend these items be serviced only by your Honda dealer.