

Engine Idle Speed


Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.

The engine must be at normal operating temperature for accurate idle speed adjustment.

Idle Speed Adjustment

Refer to *Safety Precautions* on page 64.

LEFT SIDE

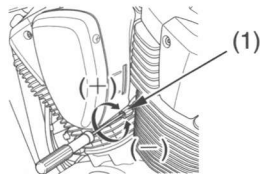

- | | |
|-------------------------|--------------|
| (1) throttle stop screw | (+) increase |
| | (-) decrease |

1. If the engine is cold, start it and warm it up with ten minutes of stop-and-go riding. Stop the engine.
2. Place your motorcycle on its side stand on a firm, level surface.