


## If You Have a Flat Tire

6. Remove the front axle shaft (6), the wheel and side collars.
- Avoid depressing the brake lever and brake pedal when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

LEFT FRONT

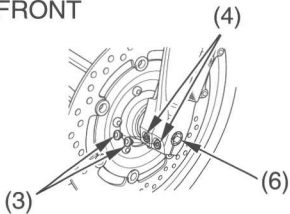

(3) bolt caps

(6) front axle shaft

### Installation

1. Install the side collars and position the wheel between the fork legs. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.
  - To avoid damaging the brake pads, carefully fit both brake discs between the pads.

(cont'd)