


## If a Fuse Blows

- Close the main fuse B cover.
- Install the left side cover.

### *Circuit Fuse Access:*

- Remove the right side cover (page 83 ).
- Open the fuse box covers ( 7 ).

### RIGHT SIDE

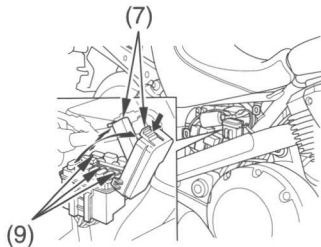

- (7) fuse box covers  
(9) spare fuses


- To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown ( 8 ), replace it with a spare fuse ( 9 ) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

 *Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

### CIRCUIT FUSE



- (8) blown fuse