

# Maintenance Schedule

Items		Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval					Refer to page:	
					mi	100	600	1,200	1,800		2,400
					km	150	1,000	2,000	3,000		4,000
		Note	Month	1	6	12	18	24			
NON - EMISSION RELATED ITEMS		Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months					98	
		Drive Chain Slider			I	I	I	I		99	
		Brake Shoe Wear				I	I	I	I	85	
		Brake System			I	I	I	I	I	82	
		Clutch System			I	I	I	I	I	70	
		Side Stand					I		I	97	
	*	Suspension					I		I	79	
	*	Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours					77
	*	Nuts, Bolts, Fasteners			I		I		I	—	
	**	Wheels/Tires			I	I	I	I	I	88, 93	
**	Steering Head Bearings			I		I		I	—		

\* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 148 ).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.