


# Throttle

---

If you can't get the freeplay within the specified range, contact your Honda dealer.

## Throttle Inspection

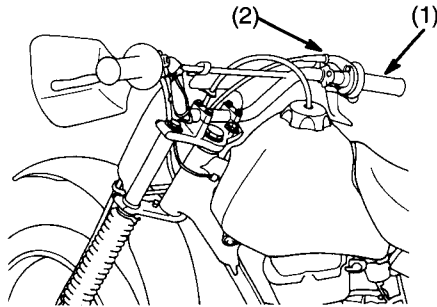

(1) throttle  
(2) throttle cable

1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
2. Check for smooth rotation of the throttle (1) from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.
3. Inspect the condition of the throttle cable (2) from the throttle grip down to the carburetor. If the cable is kinked or chafed, have it replaced.
4. Lubricate the cable with a commercially-available cable lubricant to prevent premature rust and corrosion.