


- Front: Make sure the brake arm, spring, and fasteners are in good condition.
- Rear: Make sure the brake rod, brake arm, spring, and fasteners are in good condition.

## Rear Brake Pedal Height Adjustment

RIGHT  
SIDE

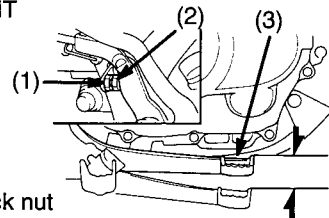

- (1) lock nut  
(2) stopper bolt (3) rear brake pedal

1. Loosen the lock nut (1) and turn the stopper bolt (2).
2. Tighten the lock nut.
3. Check the freeplay (page 82).