


## OIL FILTER ROTOR CLEANING

### NOTE

Clean the oil filter rotor before adding oil.

Remove the right crankcase cover (Page 8-3).

RIGHT CRANKCASE COVER

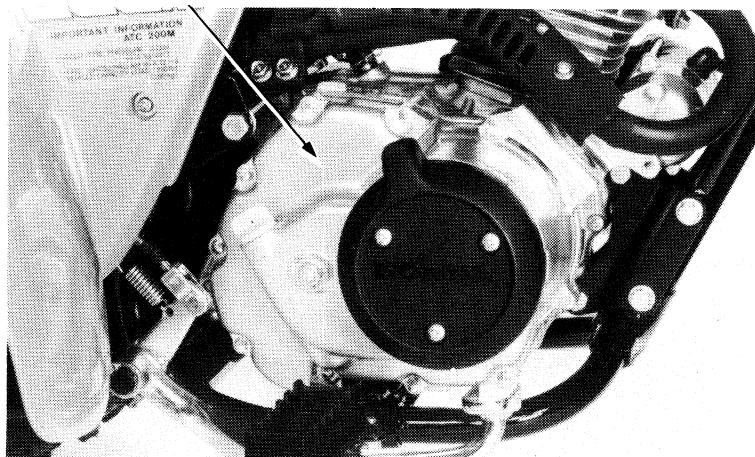

Remove the oil filter rotor cover and clean the inside of the rotor cover and rotor.

Install the oil filter rotor cover (Page 8-11).

**TORQUE:** 10–14 N·m  
(1.0–1.4 kg·m, 7–10 ft·lb)

Install the right crankcase cover (Page 8-21).  
Fill the engine with recommended grade oil (Pages 2-1 and 2-2).

OIL FILTER ROTOR COVER

