

## Instruments *(Continued)*

### 3 Changing of speed and mileage unit:

- 1a Press RESET button to select either “mph” and “mile” or “km/h” and “km”.
- !b Press SET button. The speed and mileage unit is set, and then the display moves to the changing of the coolant temperature gauge unit.