

## Cleaning the Crankcase Breather

1. Remove the rear seat and front seat.  
➤ P. 55, 56
2. Remove the left side cover. ➤ P. 57
3. Remove the air cleaner cover. ➤ P. 64
4. Remove the crankcase breather tube.
5. Drain deposits into a suitable container.
6. Reinstall the crankcase breather tube.
7. Install the parts in the reverse order of removal.

