


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ [P. 28](#)
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is Run  position. ➔ [P. 26](#)
 - Check for a blown fuse. ➔ [P. 101](#)
 - Check for a loose battery connection or battery terminal corrosion. ➔ [P. 44](#)
 - Check the condition of the battery. ➔ [P. 97](#)
- If the problem continues, have your motorcycle inspected by your dealer.