

CB300FA only

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel**Removal**

1. Park on a firm, level surface.
2. Remove the mounting bolts and remove the brake caliper.
 - u Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - u Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - u Do not pull the brake lever while the brake caliper is removed.
3. Remove the front axle nut.

