

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the seat. ➤ P. 78
2. Remove the battery. ➤ P. 77
3. Remove the junction connector by removing the screw A.

