


Changing the Indication of Multi-function Display

Change the indication between the odometer (1), the tripmeter (2), and the fuel mileage meter (3) by pressing control button A (4) or B (5).

The fuel mileage meter includes the following functions:

- current fuel mileage
- average fuel mileage
- fuel consumption

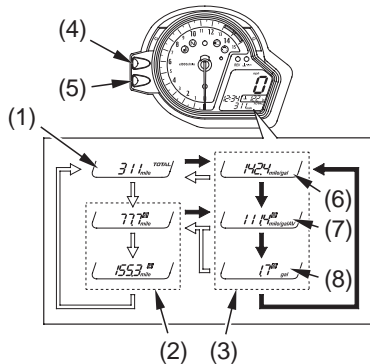

⇒ :press control button A
➔ :press control button B

- | | |
|------------------------|--------------------------|
| (1) odometer | (5) control button B |
| (2) tripmeter | (6) current fuel mileage |
| (3) fuel mileage meter | (7) average fuel mileage |
| (4) control button A | (8) fuel consumption |