


## Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower clutch cable adjuster.

1. Remove the lower cowl (page 111 ).
2. Remove the screw (3) on the right middle cowl (4) and pull it outwards.


RIGHT SIDE

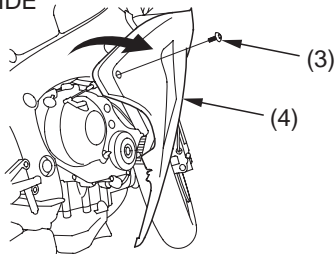

(3) screw

(4) middle cowl

3. Turn the upper clutch cable adjuster (2) all the way in (to provide maximum freeplay).
4. Loosen the lower lock nut (5).
5. Turn the lower adjusting nut (6) to obtain the specified freeplay.
6. Tighten the lower lock nut and check the adjustment.

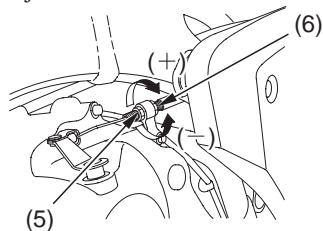

(5) lower lock nut

(6) lower adjusting nut

(+) increase freeplay

(-) decrease freeplay

(cont'd)