


## If You Have a Flat Tire

- Remove the front axle shaft (7), wheel and side collars.
  - Avoid pressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

### LEFT FRONT

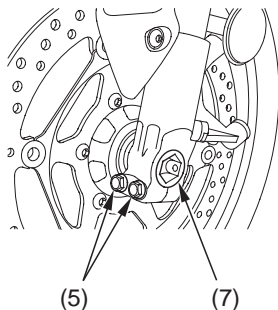

- (5) axle pinch bolts  
(7) front axle shaft