

If a Fuse Blows

Circuit Fuse Access:

6. (CBR1000RR)

Release the tabs (8), then remove the fuse box cover (9).

(CBR1000RR ABS)

Release the tabs by pushing the front tab backward, then remove the fuse box cover.

7. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (10), replace it with a spare fuse (7) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.