


# Indicators

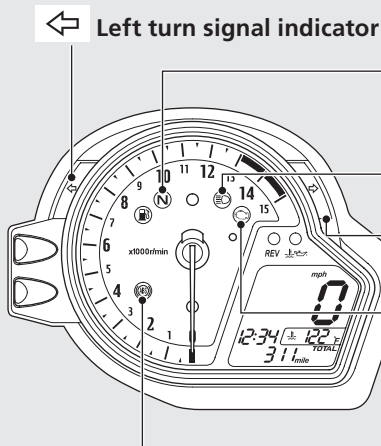

## **N Neutral indicator**

Comes ON when the transmission is in Neutral.

## **High beam indicator**

## **Right turn signal indicator**

## **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned ON.

**If it comes ON while engine is running:** **➡ P.87**



## **Combined ABS indicator (CBR1000RR ABS only)**

Comes on when the ignition switch is turned ON. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes ON while riding:** **➡ P.88**