



# Indicators

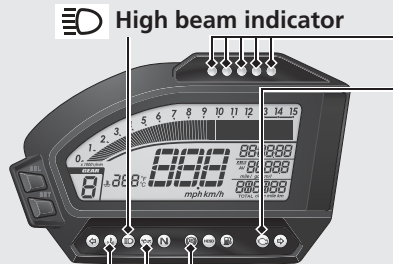

 High beam indicator

REV indicators  P. 38

 PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on.


**If it comes on while engine is running:**


 P. 96

 Low oil pressure indicator


Comes on when the ignition switch is turned on.

Goes off when the engine starts.

**If it comes on while engine is running:**  P. 96

 High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

**If it comes on while riding:**  P. 95

 Combined ABS indicator (CBR1000RR ABS only)

Comes on when the ignition switch is turned on.

Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:**  P. 97