


Ex Engine revolutions per minutes 8,000 r/min (rpm)

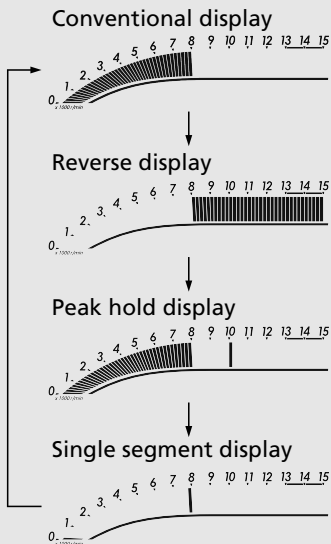

- 2 Press **SET** button. The currently selected displaying mode is set, and the control returns to the ordinary display.

In setting mode B, this setting is maintained when the ignition switch is turned off.

If the button is not pressed for about 30 seconds in this mode, the control returns to the ordinary display and the established setting is maintained.