## **Indicators**



REV indicators P. 42

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on.

If it comes on while engine is running:



## Low oil pressure indicator

Comes on when the ignition switch is turned on. Goes off when the engine starts.

If it comes on while engine is running: P. 108



Comes on briefly when the ignition switch is turned on.

If it comes on while riding: P. 107

## (B) Combined ABS indicator CBR1000RA only

Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: P. 109