

Troubleshooting

Engine Will Not Start	P. 106	Tire Puncture	P. 110
Overheating (High coolant temperature indicator is on)	P. 107	Electrical Trouble	P. 118
Warning Indicators On or Flashing	P. 108	Battery Goes Dead	P. 118
Low Oil Pressure Indicator	P. 108	Burned-out Light Bulb	P. 118
PGM-FI (Programmed Fuel Injection)		Blown Fuse.....	P. 123
Malfunction Indicator Lamp (MIL).....	P. 108		
Combined ABS Indicator	P. 109		
HESD (Honda Electronic Steering Damper) Indicator	P. 109		