


Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." 2 P. 62

Fuse Box Fuses

CBR1000RR/S

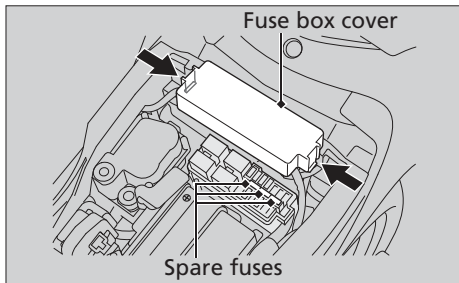

CBR1000RA

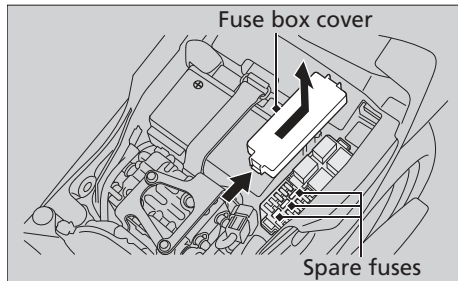

1. Remove the front seat. 2 P. 72
2. Remove the fuse box cover.
3. Pull the fuses out one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.