

## Clip

 
### Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.



### Installation

1. Push the bottom of the center pin.



2. Insert the clip into the hole.
3. Press down on the center pin to lock the clip.

## Middle Fairing

The right and left middle fairing removal can be done in the same way.

### Removal

1. Remove the clips.
2. Remove the bolts A, bolts B and bolt C.

