
Removing & Installing Body Components ► Middle Fairing

- 3. Release the tabs from the slots.
- **4.** Remove the middle fairing, bend up the harness clip and disconnect the harness band clip (▶ P. 54) and front turn signal connectors.
 - ► Be careful not to apply weight to the middle fairing.
 - ► Carefully release the hooks.

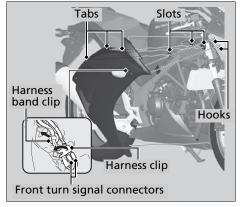

Installation

Install the parts in the reverse order of removal.

Check that the turn signals function properly after you install the right middle fairing.