


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ P. 26
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in RUN  position ➤ P. 24
 - Check for a blown fuse ➤ P. 98
 - Check for a loose battery connection or battery terminal corrosion ➤ P. 39, 50
 - Check the condition of the battery ➤ P. 94
- If the problem continues, have your motorcycle inspected by your dealer.