

Ignition Switch

Switches the electrical system on/off, locks the steering.

u Key can be removed when in the OFF or LOCK position.


Steering Lock: (P52)



Rear ABS switch

Switches the ABS function on the rear wheel on/off. (P55)

Engine stop switch/ Start button

Should normally remain in the  (Run) position.

u In an emergency, switch to the  (Off) position to stop the engine.



Hazard switch

Switchable when the ignition switch is on. Can be turned to off regardless of the ignition switch position.

u The signals continue flashing with the ignition switch in OFF or LOCK after the hazard switch is on.