

### **Hazard switch**

Switchable when the ignition switch is turned to the ON position.

### **Rear ABS switch**

Switches the ABS function on the rear wheel on/off.  **P.55**


### **Ignition Switch**


Switches the electrical system on/off, locks the steering.

- u Key can be removed when in the OFF or LOCK position.

**Steering Lock:**  **P.54**

### **Engine stop switch/** **button**

Should normally remain in the  (Run) position.

- u In an emergency, switch to the  (Stop) position to stop the engine.

