

ABS function on the rear wheel

The ABS function on the rear wheel can be optionally turned off for off-road riding.


- u Each time the ignition switch is turned to the ON position, the ABS function on both wheels will automatically be turned on.

To turn off the ABS function on the rear wheel

- 1 Stop the motorcycle.
- 2 Press and hold the rear ABS switch until the rear ABS OFF indicator starts flashing, then release the switch while the indicator is flashing.
 - u The rear ABS OFF indicator is on, when the ABS function on the rear wheel is turned off.
 - u The ABS function on the rear wheel remains on, if the switch is released after indicator stops flashing.

To turn on the ABS function on both wheels

- 1 Stop the motorcycle.
- 2 Press and hold the rear ABS switch until the rear ABS OFF indicator is turned off, or turn the ignition switch to the OFF position and the ON position.

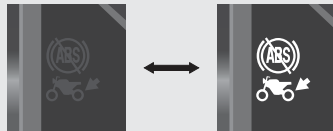

ABS function on both wheels is on.

ABS function on rear wheel is off.

Rear ABS switch

